


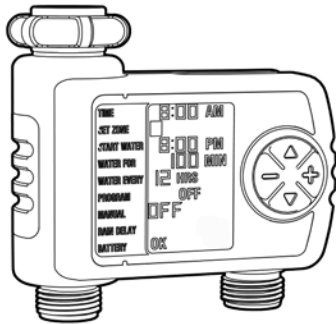

Two-zone Electronic Water Timer User Instructions



Batteries

Install 2 AA Alkaline batteries by removing the battery holder from the back of the timer and inserting the batteries as indicated. Replace the battery holder.

Once installed, the LCD screen will be working with the letters "OFF" flashing beside "MANUAL."

Installing the Timer


Attach the timer directly to an outside faucet and turn on the water.

Attach a hose to the timer outlet and then to a sprinkler, soaker hose or other watering system.

Note: The timer can be programmed before installation.

Programming the Timer

Press the UP key until the numbers beside "TIME" are flashing.

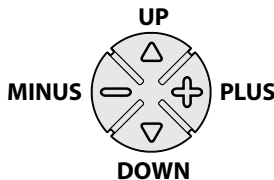

Set the current time using the PLUS and MINUS keys. By holding the key down the time will change rapidly. A tap will cause a stepped change. Once you have set the correct time, use the DOWN arrow key to move to the next section.

Use the PLUS and MINUS keys to select the "ZONE" you want to program. Use the DOWN key to move to the next section.

Select when you want to begin watering in the "START WATER" section. Again adjust the time using the PLUS and MINUS keys. Move to the next section.

Set how long you wish the water to run in the "WATER FOR" section. This time can be adjusted up to 240 minutes. Move to the next section.

Select how often you would like to water in the "WATER EVERY" section. This is set in hours or days. Move to the next section.

Activate the program by adjusting the "PROGRAM" section to ON. Watering will begin at the "START WATER" time.

3100 The timer is now programmed. "ON" will flash for 5 seconds and then stop. The timer screen will go blank after 5 minutes to conserve power. The time and program status, "ON" or "OFF," will remain visible. Pressing any button will "wake" the timer.

Move back to ZONE and select the unprogrammed zone. Repeat the programming steps to set-up the second watering zone.

Changing the Program

To make a change to the program, simply wake the timer by pressing any button. Move to the sections you wish to change and adjust as needed. Watering will resume at the "START WATER" time.

Manual Watering

Using the UP and DOWN arrows, move to "MANUAL." Using the PLUS button, adjust the time you wish to water. The timer will wait 5 seconds and begin to water. Manual watering can be up to 240 minutes.

Rain Delay

In the event of predicted rainfall, you can temporarily suspend automatic watering for up to 3 days. Simply move to "RAIN DELAY" and use the PLUS button to select the desired delay. After the delay period has passed the timer will return to the programmed operation.

Automatic Rain Delay

This timer will work with AquaSentry, Melnor's exclusive Automatic Rain Delay. AquaSentry actually monitors the moisture in the soil and delays watering if it is not needed. For more information, visit: www.melnor.com/conservation/aqua-sentry.html.

Disabling the Program

If you would like to suspend automatic watering for an extended period, simply change the "PROGRAM" line to "OFF." When you are ready to resume watering, switch "PROGRAM" to "ON." Watering will begin at the "START WATER" time. Each "ZONE" is disabled or enabled independently.

Program Memory

This timer has memory. If the battery fails or is removed, even for extended periods, the program will be retained. After installing a fresh battery you simply need to set the "TIME." The timer will retain the existing program.



Melnor, Inc. • Winchester, Virginia 22603, USA
877-283-0697 • www.melnor.com