



www.ecmindustries.com


Punch N' Cut™

INSTRUCTIONS




POLY PUNCH

Place rotating crescent against tubing. Apply forward pressure until punch pin pierces tubing. Release. Periodically wipe punch pin with fingers to remove resin build up. If larger holes are desired, remove pellet punch cutter from storage holder on top of blade handle. Thread pellet punch into rear barb holder. Place pellet punch against tubing. While applying forward pressure rotate tool back and forth until hole is punched. Remove tool.

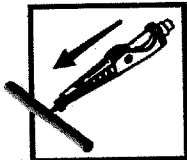

EMITTER / BARB INSERT

Insert emitter / barb in either rear or bottom holder. Place emitter / barb against punched hole in tubing. Apply pressure until emitter / barb pierces tubing. Remove tool.

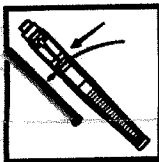

EMITTER / BARB INSERT WITH 1/4" TUBING

Install emitter with tubing 1/4" attached into crescent slots on bottom of punch handle. Place shoulder of emitter on outside edge of handle with 1/4" tubing pressed into crescents. While holding emitter assembly in crescents, place emitter barb against punched hole in tubing. Remove tool. Cut 1/4" tubing as desired.




EMITTER REMOVAL

Place eased edge on bottom of punched handle against emitter at 45° angle. Apply pressure until emitter edge is lifted and seated into crescents. While holding emitter assembly in crescents rotate tool backward until emitter is removed.



TUBING CUTTER

Lightly squeeze handle together while rotating them up down. As tubing is cut reduce pressure at the end of cut.

 CAUTION: Eye protection should be worn when using this tool



8 58459 00200 3

PRECAUTION:

Always wear eye protection.
Always wear safety gloves.
Cut only poly pipe not metal objects.
Punch pin is sharp, blade is sharp.
Keep away from children.